



# Gateway KAV60 LT2016U RAM Replacement

This guide will show the steps required to remove a malfunctioning RAM from the netbook and replace it. Replacing the RAM will give your computer a new memory space, if its previous RAM has degraded.

Written By: Emily





## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Unlock the button in the top left on the back of the laptop (So the red is showing).

## Step 2



- The battery should be able to be removed easily now.



## Step 3 — RAM




- The RAM is located under this cover.

## Step 4



- Using a Phillips #0 screwdriver, remove one (1) 5mm screw holding the cover in place.
- Use a plastic opening tool to remove the cover. Try opening tools of different sizes to find one that will easily open the cover.

## Step 5

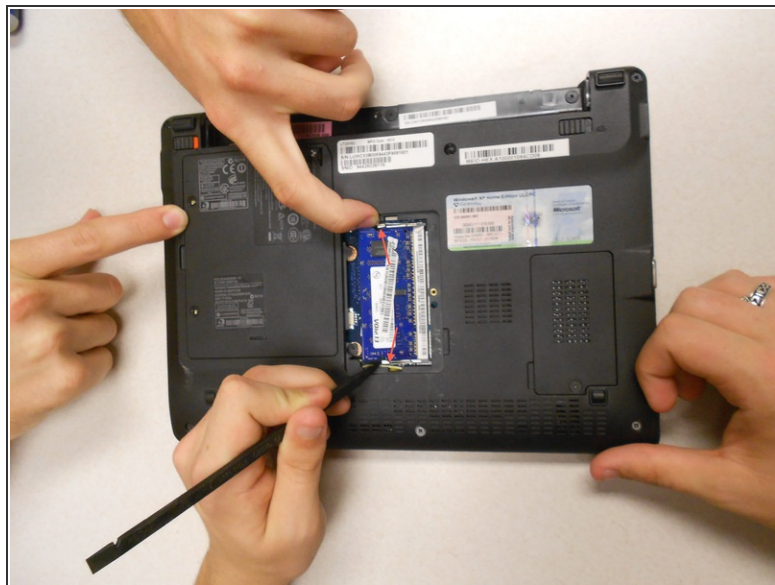

- Unlock the RAM by pinching the metal clamps that keep the RAM in place.
- Remove the RAM while the metal clamps are disengaged. Use two opening tools, positioned on each side of the RAM, and push outwards to remove the RAM.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 07:02:51 AM.